


Micom Replacement Instructions

1) Using a Phillips screwdriver remove the 6 screws on the back of the control box.



2) Remove the micom using the provided IC Extractor Tool. Grip the micom on each end and squeeze the black levers on the tool and gently commence pulling up.

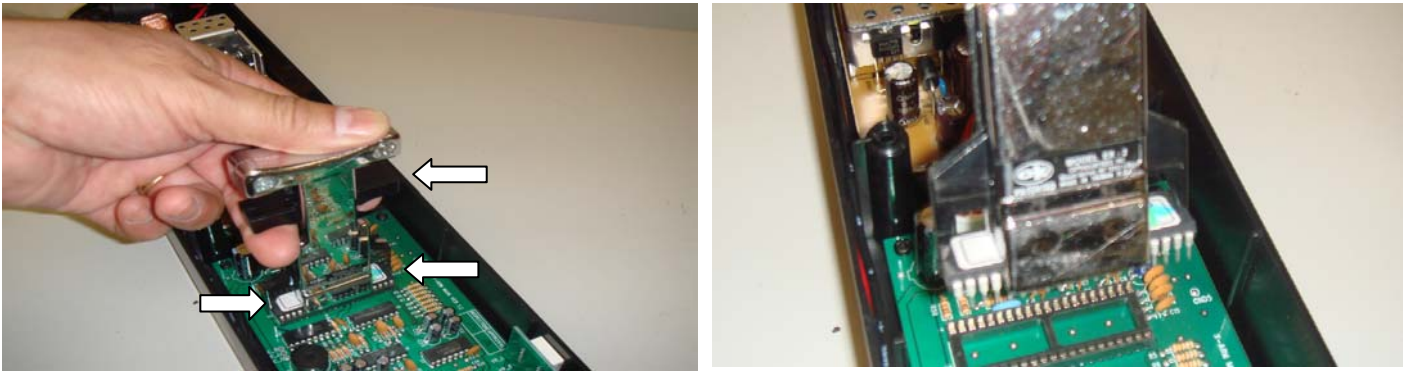

3) Gently insert the new auto micom. * Please note that the micom has a circular indentation on the right corner, which must face the top of the control box as shown*



4) Re-assembly the control box housing and proceed to install it back on the X-arm unit.